

# GasLab Pro Multi Gas Sampling Data Logger

## Operating Instructions


CM-1000

### Product Overview

Thank you for selecting the CM-1000 multi gas sampling data logger. The CM-1000 is designed to simultaneously measure multiple gas concentrations through sampling methods. With long-term data storage, the user can assess the previous records. When the CM-1000 measures the gas concentration reaching the alarm setting or higher, the data display and alarm functions are activated. The CM-1000 is equipped with an RS485 interface for connecting to a computer for remote monitoring. The Multi Gas Sampling Data Logger can be used in a wide-range of industries and applications.

### Features:

- ☑ Options for CO<sub>2</sub> measurement range: 1%, 5%, 10%, 20% 30%, and 100%
- ☑ Measure CO<sub>2</sub>, CO, O<sub>2</sub>, CH<sub>4</sub>, RH, AMB, DP, ALTI
- ☑ Large LCD for easy reading of gas concentration and temperature and humidity.
- ☑ Audible alarm
- ☑ Data logging with SD card
- ☑ Through the RS485 interface connection, multiple CM-1000 units can be connected to the back-end computer system as a security monitoring application.
- ☑ Built-in LCD back light for easy reading in the dark.
- ☑ This device is supplied with Li- ion 18650 3.7V rechargeable batteries, can be used for a long time.

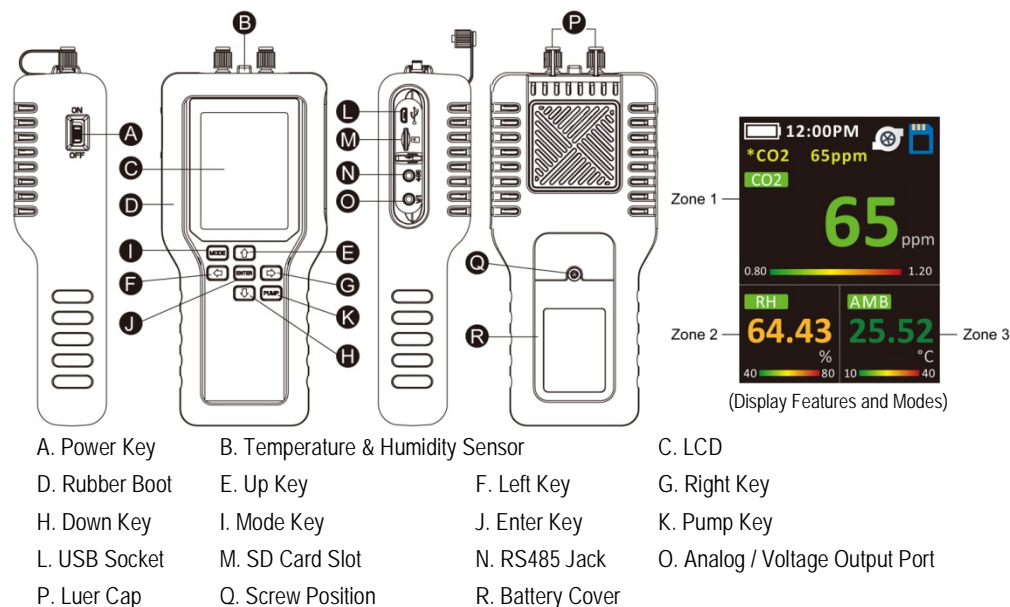

### Key description:

<b>MODE (Ⓜ)</b>	Enter the setting menu.
<b>Up (Ⓢ) / Down (Ⓣ) / Left (Ⓛ) / Right (Ⓡ)</b>	Change parameter values or select options.
<b>Enter (Ⓜ)</b>	Execute a command
<b>PUMP (Ⓟ)</b>	Start the pump or data logger.

### LCD display symbol description:

Symbol	Meaning	Description
<b>CO2</b>	CO <sub>2</sub> concentration, parts per million (ppm)	The current CO <sub>2</sub> concentration
<b>CO</b>	CO concentration, parts per million (ppm)	The current CO concentration
<b>O2</b>	O <sub>2</sub> concentration, % (percent)	The current O <sub>2</sub> concentration
<b>CH4</b>	CH <sub>4</sub> concentration, parts per million (ppm)	The current CH <sub>4</sub> concentration
<b>RH</b>	Relative humidity	Relative humidity
<b>AMB</b>	Ambient temperature	Ambient temperature
<b>DP</b>	Dew point	The current dew point
<b>ALTI</b>	Atmospheric pressure	Compensate the pressure changes with appropriate altitude of location when measure.

<b>TWA</b>	Time weighted average (8 hours)	CO <sub>2</sub> , 8-hr time weighted average
<b>STEL</b>	Short - Term Exposure Limit (15 min. weighted average)	CO <sub>2</sub> , 15 min. weighted average
<b>MAX</b>	Maximum value	Maximum value of gas measurement
<b>MIN</b>	Minimum value	Minimum value of gas measurement
	High/low alarm	Customize the range of color Bar
	Battery capacity	Battery capacity without segment display.
	Real-time display	12/24-hour time display
	Warning	Need to calibrate the sensor or exceed the pump life time.
	Pump	The pump icon rotates to indicate that the pump has been started.
	Micro SD card	Micro SD card working status (When the icon flashes, it means that the Micro SD card is broken or full; when the icon remains stationary, it indicates normal operation.)

### Operation Instructions

#### 1. Power on:

Switch the Power Key (A) on.

#### 2. Measurement:

After power on, the device starts to measure and update the data every second.

Press Enter key (J) to select zone. The selection order is: Zone 1 → Zone 2 → Zone 3. The selected zone will display a red frame. Press Left (L) / Right (R) key to select the parameter or sensor to be adjusted. The selected parameter or sensor displays the red background color, press Right key (R) to proceed the setting and then press Up (S) / Down (T) key to edit the parameter value.

Zone 1 sensor display: CO<sub>2</sub>, O<sub>2</sub>, CO, CH<sub>4</sub>

Zone 2 sensor display: O<sub>2</sub>, CO, CH<sub>4</sub>, RH

Zone 3 sensor display: CO, CH<sub>4</sub>, AMB, DP, ALTI

#### Zone 1 parameter display and setting

Item	Select 1	Select 2	Select 3	Select 4	Nothing
	MAX	MIN	STEL	TWA	
<b>AL L / AL H</b>	Press Up (S) / Down (T) key to edit the parameter value.			-	


Note: AL L and AL H are expressed as a percentage. Example: 0.04 = 400ppm

#### Zone 3 parameter unit selection:

Sensor	Unit 1	Unit 2	Unit 3	Unit 4
DP	DP=°C	DP=°F	-	-
AMB	°C	°F	-	-
ALTI	m	mf	mmHg	hpa

#### 3. Display all sensor readings

Press and hold Enter key (J) to display all sensor readings. Press Mode key (M) to return to the main screen.

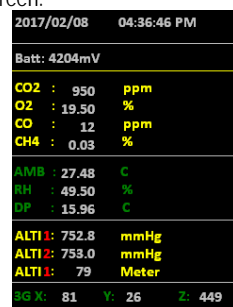

#### 4. Setting

Press and hold Mode key (M) to enter the setup menu, then press Mode key (M) to continue to the next page. Press Up (S) / Down (T) key to select options or change parameter values. And then press Enter key (J) to confirm it. Press and hold Mode key (M) to return to the main screen.

#### The first page:

<b>Date</b>	01/01/2017 ~ 2099
<b>Time</b>	12/24-hour time

<b>Continue alarm</b>	Yes (The buzzer sounds continuously.) / No (The buzzer sounds once.)
<b>Screen auto rotate</b>	Yes / No
<b>Backlight level</b>	1-32 (The larger the number, the brighter the screen)
<b>Background color</b>	(There are a total of 4 background colors.)
<b>Backlight time</b>	10-999 sec (Backlight display time)
<b>Auto power off</b>	1-999 min
<b>Graph line 2</b>	CO <sub>2</sub> / O <sub>2</sub> /CO/ CH <sub>4</sub> (The second trend line shows the gas measurements.)
<b>About</b>	CO2Meter - www.co2meter.com

#### The second page:

<b>Analog for Zone 1</b>	0-10V/4-20mA (Zone 1 voltage or current output)
<b>Analog for 4-20mA</b>	CO <sub>2</sub> /O <sub>2</sub> /CO/CH <sub>4</sub> (Another analog output option)
<b>Data log time</b>	Data logging interval time
<b>Flow rate level</b>	1-5 (The larger the number, the greater the pump output)
<b>Exhaust time</b>	10-240 sec
<b>Ventilate time</b>	0-120 sec
<b>Gas compensation</b>	Yes / No (CO <sub>2</sub> and O <sub>2</sub> )
<b>Sensor times info</b>	Sensor recalibrated time and pump life time (The time is displayed in the countdown mode. If you need to calibrate the sensor or exceed the pump life time, the time will be displayed in red.) CO <sub>2</sub> : 99999999 days O <sub>2</sub> : 99999999 days CO: 99999999 days CH <sub>4</sub> : 99999999 days Pump: 99999999 min
<b>Reset to factory</b>	Yes / No (Recover the factory setting to cancel customize setting.)
<b>Sensor calibration (▲+▼)</b>	Please refer to the calibration section.

#### 5. Power off:

Switch the Power Key (A) off.

Note: When the device is charged with USB, it cannot be turned off.

#### 6. Calibration:

##### (1) Single-point calibration

After entering the setup menu, then press Mode key (M) to continue to the next page. Press Down key (T) to select "Sensor calibration (▲+▼)" and press Enter key (J) to confirm it. Press Up (S) and Down (T) keys at the same time to proceed the calibration. Then, press Enter key (J) to enter the sensor settings.

Sensor calibration		Target sensor	CO <sub>2</sub> /O <sub>2</sub> /CO/CH <sub>4</sub> /AMB/RH
Target Sensor: CO2	Raw reading: 455	Raw reading	Unadjusted reading
Offset: 0	Perform reading: 455	Offset	The amount of offset
		Perform reading	Adjusted reading

##### (2) Two-point calibration (calibrate by professional)

After entering the setup menu, then press Mode key (M) to continue to the next page. Firstly, press and hold Up key (S), then press Down key (T). "1" will appear next to "Sensor calibration (▲+▼)". Press Down key (T) to select "Sensor calibration (▲+▼) 1" and press Enter key (J) to confirm it. Press Up (S) and Down (T) keys at the same time to proceed the calibration. Then, press Enter key (J) to enter the sensor settings.

Sensor calibration		Target sensor	CO <sub>2</sub> /O <sub>2</sub> /CO/CH <sub>4</sub> /AMB/RH
Raw reading: 455	Level 1 input: 0	Raw reading	Unadjusted reading
Level 1 catch: 10	Level 2 input: 3000	Level 1 input	Low concentration value of standard gas
Level 2 catch: 2950	Call Set: Start	Level 2 input	High concentration value of standard gas
Gain: 1.0000	Offset: 0	Level 1 catch	Connect the low concentration gas to the device, and press Pump key (K) to start the pump. (Set the data log time to less than 1 min). After the reading is stable, press Enter key (J) to confirm it.
Perform reading: 455		Level 2 catch	Connect the high concentration gas to the device, and press Pump key (K) to start the pump. (Set the data log time to less than 1 min). After the reading is stable, press Enter key (J) to confirm it.
		Cali Set	When "Start" turns red, press Enter key (J) to confirm the calibration.
		Gain	The amount of Gain.
		Offset	The amount of offset
		Perform reading	Adjusted reading

## Rechargeable Batteries

### Battery message:



'Battery OK':  
Measurements are possible



'Battery Low':  
The battery needs to be recharged,  
measurements are still possible



'Battery Exhausted':  
Measurements are not  
possible

### Battery installation:

This device is supplied with Li-ion 18650 3.7V rechargeable battery \*3 pcs.

Please confirm whether batteries + polarity are Li ion18650 positive bump specification and install batteries in the correct polarity. If the battery polarity is reversed, the capacity will be insufficient and the battery life will be shortened.

### Battery charging:

During battery charging, the temperature of the device will rise by 5°C-10°C. At this time, the measurements of temperature and humidity will be affected by temperature rise. Cause an impact on the accuracy of temperature when charging, please use a fan to blow toward the Temperature & Humidity Sensor (Ⓜ) directly in order to get a compensated balance of temperature and humidity between temperature sensor and surrounding area. (5V/1A USB adapter charger)

## Safety Instructions

Warning: Your safety is very important to us. To ensure use of the device correctly and safely, we would like to draw your attention to read the warning and entire User Manual before using the device. These are important safety information and should always be observed .

1. Please handle the device lightly, do not subject the device to impact or shock.
2. Do not immerse the device in water. Water can cause electric shock, fire or malfunction which may result in damage.
3. Do not keep the device under the hot and moisture environment. Keep the device away from the heat source or near water.
4. Please use a standard USB power supply (such as PC's USB port, universal AC adapter with USB port). Improper power supply can cause serious damage to the device, or result in injury or death to the user.

## Product Care

To ensure you receive the maximum benefit from using this device, please observe the follow guidelines.

1. The maximum capacity of the SD card is 16G.
2. During battery charging, the temperature of the device rises. The temperature and humidity sensors are affected. At this time, measurements are only for reference. After batteries are fully charged and the device cools down, measurements are reliable.
3. **Repair** – Do not attempt to repair the device or modify the circuitry by yourself. Please contact with the local dealer or a qualified repairman if the device needs servicing.
4. **Caution** – The CO sensor must be replaced every 3 years.
5. **Cleaning** – Disconnect the power before clean. Use a damp cloth, do not use the liquid cleaning agent, such as benzene, thinner or aerosols.
6. **Maintenance** – Recommend that the user conducts a comprehensive test and calibration every year to ensure the normal operation of the device.

## Specifications

Measurement Range & Accuracy	CO <sub>2</sub> : 1%, 5%, 10%, 20%, 30%, 100%
	CO: 0~1,000ppm
	O <sub>2</sub> : 0-25%, < 2% FS / 0.1 mbar
	CH <sub>4</sub> : 5% 0-1%: ≤±0.1%
	RH: 0-100%, ±3% @25°C (20-80%RH), others ±5%
	Temperature: 0-50°C, ±1°C
	Barometer: 50-110kPa, ±0.4kPa
Display Resolution	CO <sub>2</sub> : 10ppm
	CO: 1ppm
	O <sub>2</sub> : 0.01%
	CH <sub>4</sub> : 0.01%
	RH: 0.01%
	Temperature: 0.01°C
	Barometer: 0.1mmHg

Alarm Volume	80db±5%@10cm
Operating Conditions	0-50°C(32-122°F), 0-95%RH, non-condensing
Storage Temp.	-20-60°C(-4-140°F)
Comm. Interface	RS485 ModBus BR19200、N、8、1
Power Supply	Rechargeable Battery : Li-ion 18650 3.7V *3
	AC Adapter : 5V±5% >1A, 100-240 VAC, 50/60 Hz
Storage Capacity	depend on SD card capacity (max.16G SD card)
Weight	480g (without batteries)
Dimension	225.8x99.6x55 mm (8.9x3.9x2.2 inch)

**Note:** After power-on, it would take 20 minutes for the device to stably measure the temperature and relative humidity.

**⚠️EMC/RFI:** Readings may be affected if the unit is operated within radio frequency electromagnetic field strength of approximately 3 volts per meter, but the performance of the instrument will not be permanently affected.

## Package contents

CM-1000 Multi Gas Sampling Logger  
Manual  
Batteries  
USB 1.5M cable



### Contact Details:

Exclusively Distributed & Supported By:  
Air Quality Sensors  
Ph: 1300 430 928  
info@airqualitysensors.com.au  
www.airqualitysensors.com.au